

comfee'
...is how I cook!



CPC60D7ABB

14-in-1 Programmable Electric Pressure Cooker

Instruction Manual



IMPORTANT NOTE: For your safety and continued enjoyment of this product, always read the instruction Manual carefully before using.

CONTENT

IMPORTANT SAFEGUARDS	1
BEFORE FIRST USE	4
OPERATING INSTRUCTIONS	5
SPECIFICATIONS	6
COMPONENTS	7
CONTROL PANEL	7
FUNCTIONS	8
COOKING MODES	10
ADDITIONAL SAFETY INFORMATION	11
CLEANING AND MAINTENANCE	16
TROUBLESHOOTING	16
SERVICE AND SUPPORT.....	19

IMPORTANT SAFEGUARDS

CAUTION

When using electrical appliances, basic safety precautions should always be followed including the following:

READ ALL INSTRUCTIONS.

- Do not touch hot surfaces of the pressure cooker. Use handles only.
- To protect against electric shock, do not immerse cord, plugs, or outer vessel in water or other liquids.
- This appliance should not be used by or near children or individuals with certain disabilities.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on, or taking off, parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Use of accessories not specifically recommended by the appliance manufacturer may cause injuries or damage to the unit.
- For household use only. Do not use outdoors.
- Do not let the power cord hang over the edge over the table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or a heated oven.
- Extreme caution must be used when moving a pressure cooker containing hot liquids or foods.

IMPORTANT SAFEGUARDS

- Always attach the plug to the appliance before inserting the plug into the outlet. To disconnect the appliance from electricity, press "Cancel" on the control panel and then remove the plug from the outlet.
- Do not use the appliance for anything other than the intended use.
- This appliance cooks under pressure. Improper use may result in scalding or other injuries. Make certain unit is properly closed before operating.
- For general foods, do not fill the pot above the 2/3 (MAX) line. For foods that expand during cooking, such as dried vegetables, legumes, beans, and grains, do not fill the pot above the 1/2 line. Overfilling may cause a risk of clogging the pressure limit valve and developing excess pressure. Be aware that certain foods, such as applesauce, cranberries, pearl barley, oatmeal and other cereals, split peas, noodles, macaroni, rhubarb, or pasta can foam, froth and sputter, and clog the pressure release devices.
- Do not open the appliance until the appliance has cooled and all internal pressure has been released. If the float valve is still up and/or the lid is difficult to open, this indicates that the appliance is still pressurized – do not force it open. Any pressure in the appliance can be hazardous.
- Always check the pressure release valve and float

IMPORTANT SAFEGUARDS

valve for clogging or sticking. The pressure release valve and float valve must move freely before use.

- Do not use this appliance for pressure frying with oil.
- To prevent risk of explosion and injury, only replace the sealing ring with one that is recommended by the manufacturer.
- Do not use under cabinets; steam from pressure release may cause damage.
- Intended for countertop use only.
- **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter, never use outlet below counter, and never use with an extension cord. A short power-supply cord is used to reduce the risk resulting from it being grabbed by children, becoming entangled in, or tripping over a longer cord.
- **CAUTION:** Risk of Electric Shock. Only cook in the provided cooking pot.
- Close supervision is necessary when the pressure cooker is used near children.

SAVE THESE INSTRUCTIONS

BEFORE FIRST USE

Tips:

- Remove dust from shipping by wiping all surfaces with a damp cloth.
- Thoroughly clean the cooking pot and sealing ring in the dishwasher or with warm soapy water. Ensure that the cooking pot and sealing ring are soap/detergent free and dry before being placed in the pressure cooker.

Note:

 
- Pressure Release Valve Cleaning: Please remove the pressure release valve by simply pulling it off the lid. Then, using a damp cloth with mild detergent, clean the pressure release valve and surrounding area. Perform this cleaning at least once a month.
- Sealing Ring Cleaning: Remove the sealing ring from the lid and use a light abrasive brush and mild detergent to clean the sealing ring at least once a month.
- Liquid Collector Cleaning: After each use, remove all liquids from the liquid collector and use a cloth and soapy water to clean.

Anti-Clog Cover & Sealing Ring Disassembly/Installation

1. Anti-Clog Cover

Disassembly: Squeeze the cover between your thumb and index finger then twist upwards.	
Installation: Place the cover over the mounting prongs and use your thumb to press down until the cover locks into place.	

2. Sealing Ring

Disassembly: Grab the top of the sealing ring and pull upward until the entire sealing ring is removed from around the metal wire.	
Installation: Place one section of the sealing ring below the metal wire. Then, push the sealing ring down as you work around the lid until the sealing ring snaps into place in all locations. Note that the sealing ring is reversible and must be properly secured to gain pressure.	

BEFORE FIRST USE

NOTE:

- Before each use, ensure that the sealing ring and anti-clog cover are properly installed.
- To avoid jamming and bad odor, please clean around the sealing ring and anti-clog cover after each use.
- Please do not excessively pull on the sealing ring. If the sealing ring is distorted, pressure may not be gained.
- Do not use a damaged sealing ring. If damaged, please contact an authorized repair office.

OPERATING INSTRUCTIONS

• Removing Lid Use the lid's handle to rotate the lid approximately 30° counter-clockwise and then lift.	 Unlocked
• Checking Lid Components Check that the pressure release valve and float valve are not jammed. Also, confirm that the sealing ring and anti-clog cover are properly installed.	
• Adding Food The total amount of food content and water shall not exceed the "MAX" marking on the cooking pot.	

OPERATING INSTRUCTIONS

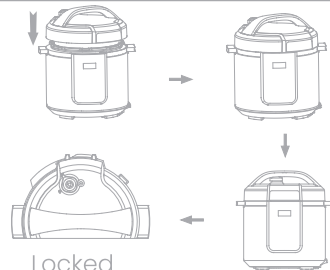
• Placing Cooking Pot

Wipe down the outside of the cooking pot to make sure that there are no substances present. No substances should enter the inside of the pressure cooker. Once the cooking pot is inside the pressure cooker, rotate the cooking pot to ensure good contact with the heating plate.



• Attaching Lid

Before attaching the lid, check if the sealing ring is properly installed. To attach the lid, place the lid onto the pressure cooker at the same angle used to remove the lid. Then rotate the lid approximately 30° clockwise.

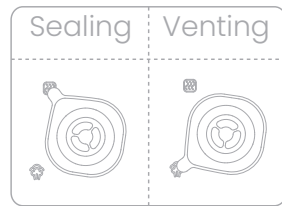


Locked

(Pictures are for reference only, the actual product may differ)

• Setting Pressure Release Valve

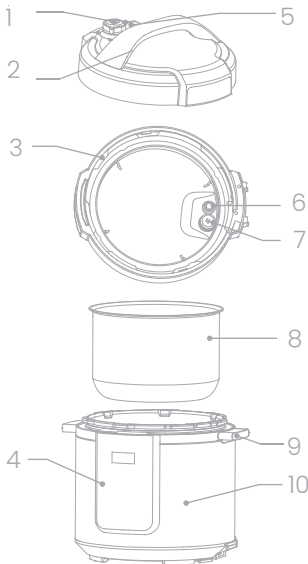
To gain pressure, set the pressure release valve to the sealing setting. To release pressure, set the pressure release valve to the venting setting. Ensure that the float valve is down before use.



SPECIFICATIONS

Model	Capacity	Rated Voltage	Rated Power	Cooking Pot Diameter	Pressure	Keep Warm Temperature
CPC60D7ABB	6 Qt	120V~ 60Hz	1000W	8.66"	0-60kPa	140° F~176° F
Accessories	Spoon	Ladel	Condensation Cup	Measuring Cup	Steam Rack	Power Cord Components
						

COMPONENTS



No.	Name
1	Pressure Release Valve
2	Lid Handle
3	Sealing Ring
4	Control Panel
5	Float Valve
6	Float Valve Stop
7	Anti-Clog Cover
8	Cooking Pot
9	Body Handles
10	Main Body

CONTROL PANEL

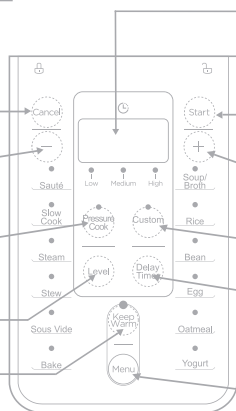
Cancel: turns pressure cooker off

- : decreases time

Pressure Cook: program a pressure cooking cycle

Level: cook at low, medium, or high

Keep Warm: program a warming setting



Display Screen: shows time or other message

Start: activates cooking cycle

+ : increases time

Custom: program a cycle that remembers the last settings

Delay Timer: change how long the delay time is set

Menu: change the selected function

FUNCTIONS

FUNCTION	OPERATING INSTRUCTIONS
	Press  to program a warming mode. The  button can then be used to set keep warm at a low, medium, or high setting. Also,  and  can be used to change the set time. Press  to activate the cycle.
	Press  to cycle between Sauté, Slow Cook, Steam, Stew, Sous Vide, Bake, Soup/Broth, Rice, Bean, Egg, Oatmeal and Yogurt cooking modes. After choosing the desired cooking mode,  and  can be pressed to change the cook time. Also, the  button can be pressed to change the setting between low, medium, or high. Press  to activate the cooking cycle.
	Press  to select the Pressure Cook function. Then,  and  can be used to change the cook time. Also, the  button can be pressed to change the setting between low, medium, or high. Press  to activate the cooking cycle.
	Before the cooking cycle has been started, press  to add time (10min - 24h) before the cooking cycle starts. Press  again to cycle between setting hour and 10 minute increments. The  and  buttons can be used to change the delay time. Once the  button has been pressed, the delay timer will begin to countdown. Note that Yogurt, Sauté, Bake, Keep Warm, and Sous Vide cannot use Delay Timer.

FUNCTIONS

FUNCTION	OPERATING INSTRUCTIONS
Level	Press  to change the cook setting between low, medium, and high.
Custom	Press  to select the Custom function. Then,  and  can be used to change the cook time. Also, the  can be pressed to change the setting between low, medium, or high. Press  to activate the cooking cycle. The Custom function will memorize the last settings that were used.
Sous Vide	Press  until <u>Sous Vide</u> is selected. Press  to cycle between time and temperature settings. Use  and  to adjust the set time and temperature. Press  to activate the cooking cycle. The Sous Vide function will preheat before displaying the cook time. Sous Vide should only be used with food-grade vacuum sealing bags that have had all air removed.

COOKING MODES

Cooking Mode	Level	Default Time	Time Range	Delay Time Range	Keep Warm Time
Sauté	High	00:30	00:01-00:30	-	-
	Medium				
	Low				
Bake	High	00:45	00:01-01:00	-	10h
	Medium	00:40			
	Low	00:35			
Stew	High	00:45	00:01-04:00	00:10-24:00	10h
	Medium	00:40			
	Low	00:20			
Steam	High	00:25	00:01-04:00	00:10-24:00	10h
	Medium	00:20			
	Low	00:10			
Oatmeal	High	00:30	00:01-04:00	00:10-24:00	10h
	Medium	00:05			
	Low	00:01			
Slow Cook	High	04:00	00:30-24:00	00:10-24:00	10h
	Medium	06:00			
	Low	08:00			
Pressure Cook	High	00:45	00:01-04:00	00:10-24:00	10h
	Medium	00:40			
	Low	00:10			
Soup/Broth	High	03:00	00:01-04:00	00:10-24:00	10h
	Medium	00:40			
	Low	00:10			
Egg	High	00:08	00:01-04:00	00:10-24:00	10h
	Medium	00:05			
	Low	00:03			
Rice	High	00:15	00:01-04:00	00:10-24:00	10h
	Medium	00:12			
	Low	00:08			
Bean	High	00:45	00:01-04:00	00:10-24:00	10h
	Medium	00:40			
	Low	00:20			
Yogurt	High	boil	-	-	-
	Medium	08:00	00:30-99:30		
	Low	24:00			
Sous Vide	N/A	133°F 03:00	77-194°F 00:30-99:30	-	-
Custom	High	00:30	00:01-08:00	00:10-24:00	10h
	Medium	00:10			
	Low	00:05			
Keep Warm	High	10:00	00:10-10:00	-	-
	Medium				
	Low				

ADDITIONAL SAFETY INFORMATION

To avoid personal injury and property loss, be sure to observe the following safety precautions.

• Warning Symbols:

 Forbidden	 General Forbidden	 Disassembly Forbidden	 Wet Hands Forbidden
	 Contact Forbidden	 Liquid Forbidden	
 Mandatory	 Must be Performed	 Remove Power Plug	



Warning

It may possibly cause death or serious injury if the warnings are ignored.

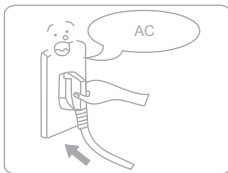


Caution

It may cause physical injury or property damage if the caution items are ignored.

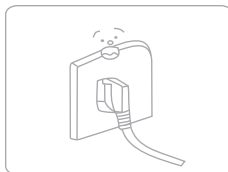


Warning



Use correct electrical outlet (refer to the label)

- Failure to use correct electrical outlet can result in a fire or possible electric shock.

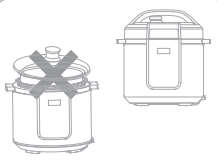
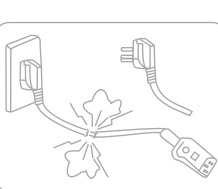
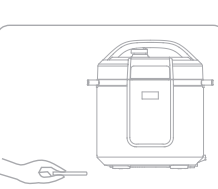


Only use a 3-prong grounded outlet

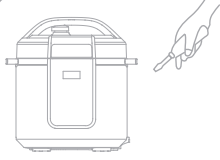
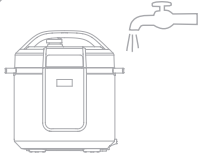
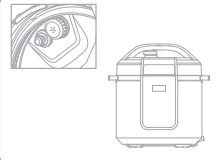
- Only use a 10A+ rated outlet that contains a ground receptacle;
- If the electrical circuit being used is shared with other electronics or appliances, the outlet or circuit may overheat and cause a fire.



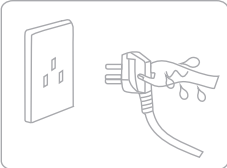
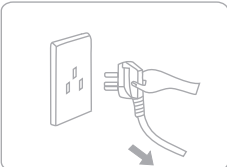
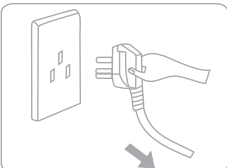
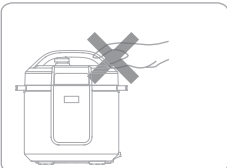
ADDITIONAL SAFETY INFORMATION

 Warning	
	Do not use other lids • It is strictly prohibited to use other lids for cooking, keeping warm, transporting, storage, or other uses. • Using other lids may cause electric shock or other safety hazards. 
	Do not use if power cord is damaged • Contact the manufacturer or an authorized repair center if the power cord is damaged. 
	Do not use foreign objects • It is prohibited to insert metal shavings, needles and other foreign matter into any portion of the device. • Use of accessories not specifically recommended by Comfee' may cause damage to unit or electric shock. 
	Place the appliance in a location out of reach of infants • This appliance should not be used by or near children or individuals with certain disabilities. • This appliance cooks under pressure. Improper use may result in scalding or other injuries. Ensure that the unit is properly closed before operation. 

 
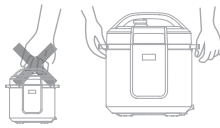
ADDITIONAL SAFETY INFORMATION

 Warning	
	Modification is prohibited • Modification or repair by non-professionals is prohibited. • Violation may cause a fire or electric shock. • Repair or replacement of parts shall be made in a designated service center. 
	Products may not be immersed or sprinkled in water or other liquids • Immersing or sprinkling the product in water or other liquids so could cause electric shock and/or electrical short circuits. 
Do not open lid when pressurized • When the pressure cooker is not pressurized, the float valve is down; • As the pressure rises in the pressure cooker, the float valve ascends. • Do not open the lid until pressure has been completely released. 	
	Check pressure release valve and anti-clog cover for blockage • Before each use, make sure that the pressure release valve and anti-clog cover are not blocked. • Do not cover the pressure release valve or replace the pressure release valve with another object. 

ADDITIONAL SAFETY INFORMATION

 Caution		
	Never touch the power plug with a wet hand • Touching the power plug with a wet hand may cause electric shock.	
	Only remove the power plug by grabbing the plug's head • Pulling on the cord and not the plug head may damage the cord, cause electric shock, or cause a short circuit.	
	Always unplug when not in use • Leaving the pressure cooker plugged in while it is not in use may cause electrical leakage, device failure, or fire.	
	Keep hands and body parts away while releasing steam • To avoid burns, keep hands and other body parts away from releasing steam. • Do not cover the pressure release valve with a cloth or other item.	
	Do not touch lid while cooking • While the pressure cooker is cooking or has recently been cooking, the lid will be very hot. • Touching the lid during or after cooking may cause scalding or other injuries.	

ADDITIONAL SAFETY INFORMATION

 Caution		
	Do not exceed max fill values Exceeding the max cooking values on the cooking pot may result in a device malfunction or improperly cooked food.	
	Do not use other cooking pots It is strictly prohibited to use cooking pots other than the cooking pot that is provided.	
	Do not put in oven or on stove-top Do not put the pressure cooker or any components in the oven or on a stove-top.	
	Only transport the product using body handles Extreme caution must be used when moving a pressure cooker containing hot liquids or foods.	
Do not use in the following locations - Do not use in unstable locations; - Do not use in locations near water and/or fire; - Do not use near walls and/or furniture; - Do not use in locations exposed to direct sunlight and/or oil splatter;		

CLEANING AND MAINTENANCE

- Clean after each use.
- Before cleaning and maintenance, please unplug the power cord and wait until the entire pressure cooker cools.
- To clean the interior of the pressure cooker body, remove the lid and cooking pot. Then, clean with a damp cloth and wipe dry.
- To clean the lid, use a cloth and soapy water. Be sure to also remove and clean the pressure release valve, float valve, anti-clog cover, and sealing ring.
- Clean the body of the pressure cooker with a damp rag and never soak or spray the body of the pressure cooker with water or other liquids.
NOTE: Any other servicing should be performed by an authorized service representative.
- Place the electric pressure cooker at least 4.72in (11.99cm) away from other kitchen appliances

TROUBLESHOOTING

If you have problems with your pressure cooker, please follow the troubleshooting guide before contacting an authorized servicing agent.

No.	Symptom	Possible Reasons	Solutions
1	Difficult to attach the lid	Sealing ring not installed properly	See Anti-Clog Cover & Sealing Ring Disassembly /Installation
		A foreign object is below the cooking pot	Remove the foreign object
2	Difficult to remove the lid	Float valve is stuck	Gently maneuver the float valve until free
		Pressure exists inside the cooker	Open the lid after the pressure is completely released.

TROUBLESHOOTING

No.	Symptom		Possible Reasons	Solutions
3	Steam leaks from the lid		Sealing ring installed improperly	See Anti-Clog Cover & Sealing Ring Disassembly /Installation
			Food debris attached to the sealing ring	Clean the sealing ring
			Sealing ring damaged	Replace the sealing ring
			The lid is not closed correctly	See OPERATING INSTRUCTIONS
4	Steam leaks from float valve		Food debris on the float valve gasket	Clean the float valve gasket
			Float valve gasket worn-out	Replace the float valve gasket
5	Float valve unable to rise		Too little food and water in inner pot	Add water and food according to the recipe
			Steam leaks from the lid or float valve	Send to the service center for repair
6	Steam releases when pressure release valve is sealed		Pressure release valve not in sealing position	Turn the pressure release valve to the sealing position
			Pressure control fails	Send to the service center for repair
7	No power		Poor contact with power outlet	Check the power outlet
8	All indicators flags	Display screen displays E1	Bottom sensor fault	Send to the service center for repair
		Display screen displays E2		
		Display screen displays C1	High temperature due to lack of water in cooking pot	Add water according to the requirement
		Display screen displays E8	Pressure switch fault	Send to the service center for repair

TROUBLESHOOTING

No.	Symptom	Possible Reasons	Solutions
9	Rice half cooked or too hard	Too little water	Add water accordingly
		Lid opened prematurely	After cooking cycle completes, leave the lid on for 5 more minutes
10	Rice too soft	Too much water	Reduce water accordingly
11	• Power cord and plug is expanded, deformed damaged and/or it's color has changed • Hot power cord or plug • The electric pressure cooker has abnormal heating and generates a bad odor • There's abnormal noise or vibration when powered on		Stop using and call our Consumer Service Center
12	• There's dust or dirt on the plug or socket		Remove the dust or dirt

NOTE: Please contact our authorized service center for repair
 Customer Service Management Office: Parsippany, NJ, 07054
 Amazon Store: <https://www.amazon.com/comfee>
 Tel: 866-646-4332
 E-mail: officialservice@comfeeappliance.com

SERVICE AND SUPPORT

1 YEAR LIMITED WARRANTY

This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or any component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us and our returning the product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value.

This warranty does not cover wear from normal use, and operation doesn't conformity with the instruction manuals, or damages to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if products is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the label.

We exclude all claims for special, incidental, and consequential damages by breach of express or implied warranty. All liability is limited to amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchant-ability or fitness for particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.

This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental consequential damages, so the foregoing limitations may not apply to you. Please note that failure to complete and submit this form does not diminish your warranty



In the Event of a warranty period claim, question, comments or if service is required for this product, please contact us at the following:

Customer Service Management Office:
Parsippany, NJ 07054
Toll Free: 1-866-646-4332

Amazon Store:
<https://www.amazon.com/comfee>
Tel: 866-646-4332
E-mail: officialservice@comfeeappliance.com
Made in China